 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 6 (41)	

2.2 Cooling fan replacement

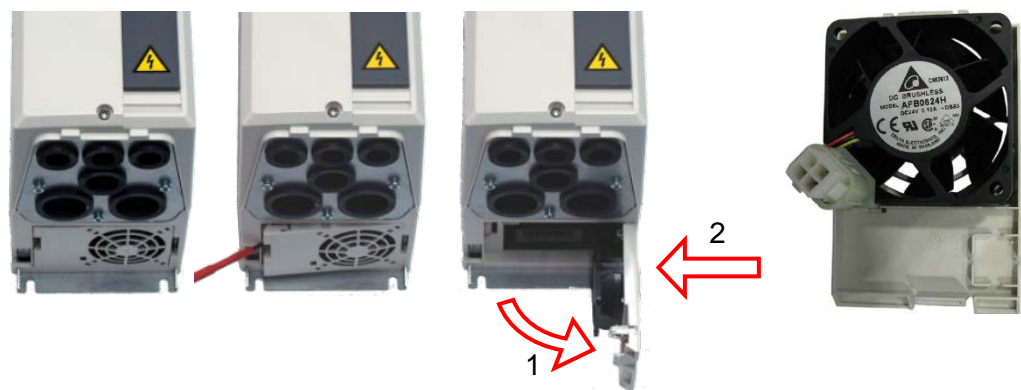
2.2.1 Frame R0, Main cooling fan

Types:

- ACx580-01-02A6-4
- ACx580-01-03A3-4
- ACx580-01-04A0-4
- ACx580-01-05A6-4


The main cooling fan is located at the bottom of the drive. Replace the fan as follows:


- a. Release the locking clamp, use a flathead screwdriver to assist
- b. Remove the fan by opening the unit (1.) and pushing leftwards at the base (2.)
- c. Clean the cooling air duct and the heat sink with compressed air. See separate instructions in section 2.1.1



- d. Check that the fans blowing direction is inside the unit and install the new fan unit simply by pushing it to its place.

Ensure the fan operation when the drive is powered up

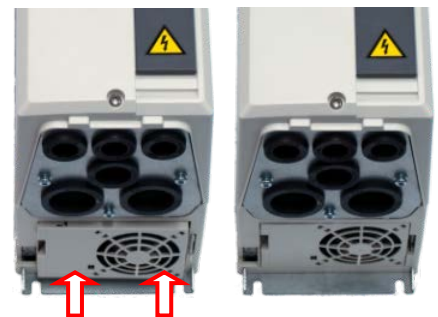

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 7 (41)	

2.2.2 Frame R0 IP55, Internal cooling fan

Types:

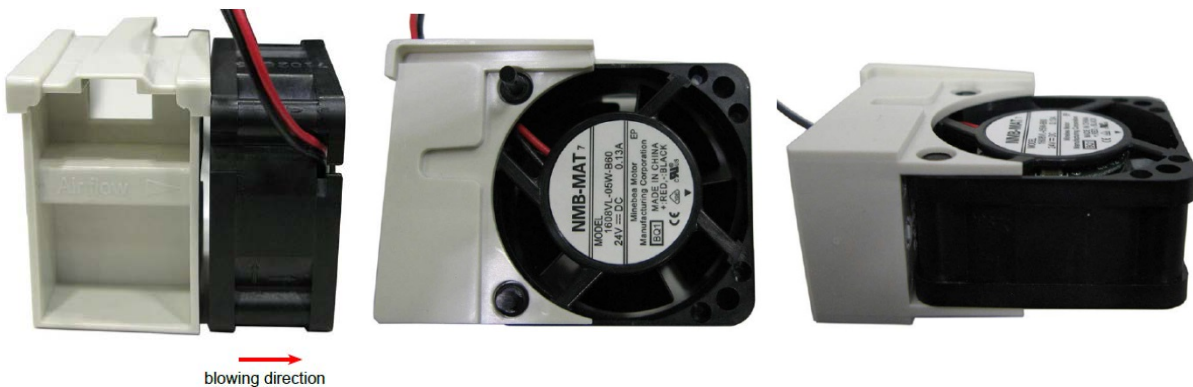
- ACx580-01-02A6-4
- ACx580-01-03A3-4
- ACx580-01-04A0-4
- ACx580-01-05A6-4

1. Remove front cover


- a. Remove control panel
- b. Open mounting **screw** with a screwdriver
- c. Push the front cover slightly upwards and lift it off

2. Replace internal fan


- a. Remove internal fan sledge from plastic housing
- b. Assembly new internal fan+sledge combination
 - i. Place internal fan to sledge, ensure correct blowing direction
 - ii. Place FR-1 rivets through the holes and push them to bottom



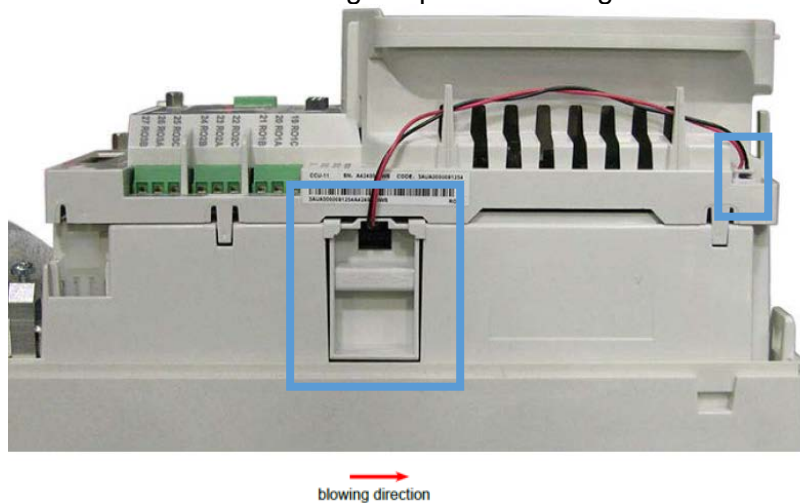- c. Place internal fan sledge to plastic housing



3. Install components in reverse order

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 8 (41)	


2.2.3 New Frame R1, Main cooling fan

Types:

- ACX580-01-04A6-2
- ACX580-01-04A7-2
- ACX580-01-06A6-2
- ACX580-01-06A7-2
- ACX580-01-07A5-2
- ACX580-01-07A6-2
- ACX580-01-10A6-2
- ACX580-01-012A-2
- ACX580-01-017A-2
- ACX580-01-018A-2
- ACX580-01-02A1-4
- ACX580-01-02A7-4
- ACX580-01-03A0-4
- ACX580-01-03A4-4
- ACX580-01-03A5-4
- ACX580-01-04A1-4
- ACX580-01-04A8-4
- ACX580-01-05A7-4
- ACX580-01-06A0-4
- ACX580-01-07A3-4
- ACX580-01-07A6-4
- ACX580-01-09A9-4
- ACX580-01-012A-4
- ACX580-01-12A7-4

The main cooling fan is located on the top of the drive.



 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 9 (41)	

Replace the fan as follows:


1. Release two locking clamps, use a flathead screwdriver to assist.




2. Remove the fan.



3. Clean the cooling air duct and the heat sink with compressed air. See separate instructions in section 2.1.1.
4. Check that the fan blowing direction is outside the unit and install the new fan in reverse order to above. Ensure the fan operation when the drive is powered up.

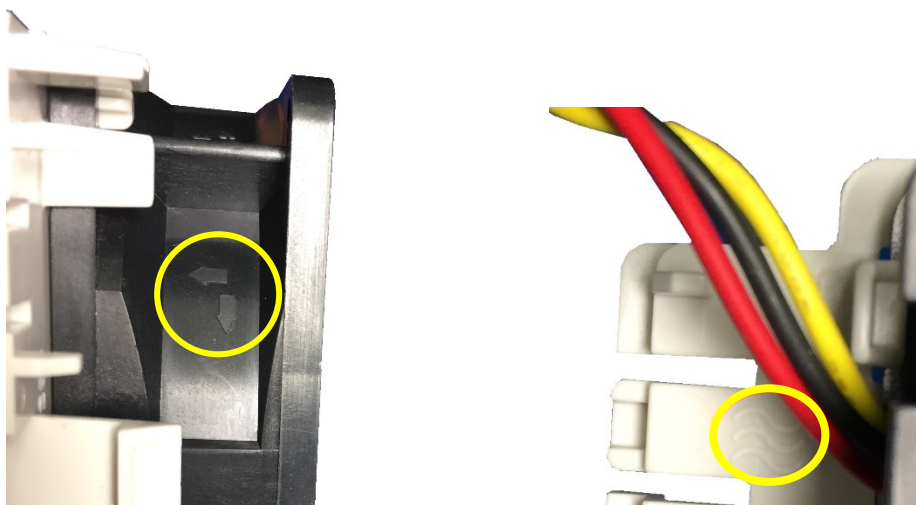

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 10 (41)	

2.2.4 New Frame R1 IP55, Internal cooling fan

Types:


- ACX580-01-04A6-2
- ACX580-01-04A7-2
- ACX580-01-06A6-2
- ACX580-01-06A7-2
- ACX580-01-07A5-2
- ACX580-01-07A6-2
- ACX580-01-10A6-2
- ACX580-01-012A-2
- ACX580-01-017A-2
- ACX580-01-018A-2
- ACX580-01-02A1-4
- ACX580-01-02A7-4
- ACX580-01-03A0-4
- ACX580-01-03A4-4
- ACX580-01-03A5-4
- ACX580-01-04A1-4
- ACX580-01-04A8-4
- ACX580-01-05A7-4
- ACX580-01-06A0-4
- ACX580-01-07A3-4
- ACX580-01-07A6-4
- ACX580-01-09A9-4
- ACX580-01-012A-4
- ACX580-01-12A7-4


Remove the front cover. You will find the internal cooling fan on the right side of the drive.

1. Remove the transparent plastic cover in front of the fan with a screwdriver.



2. Unlock the wires from the right and take slowly the fan out by pulling the wires.

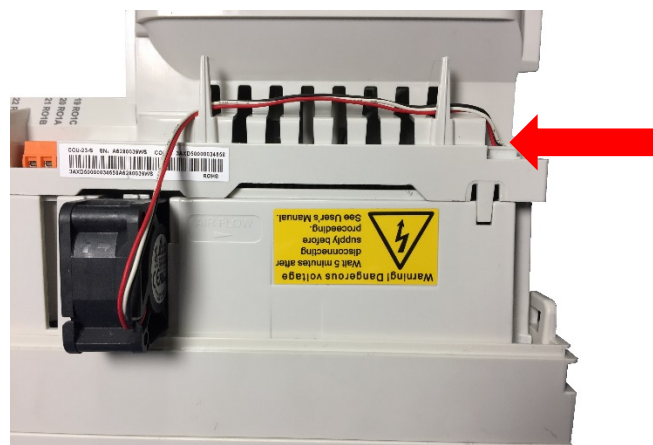

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 11 (41)	

3. Assembly the new internal fan and check that the blowing direction is to upwards. Remember to reinstall the transparent plastic cover and the wires.



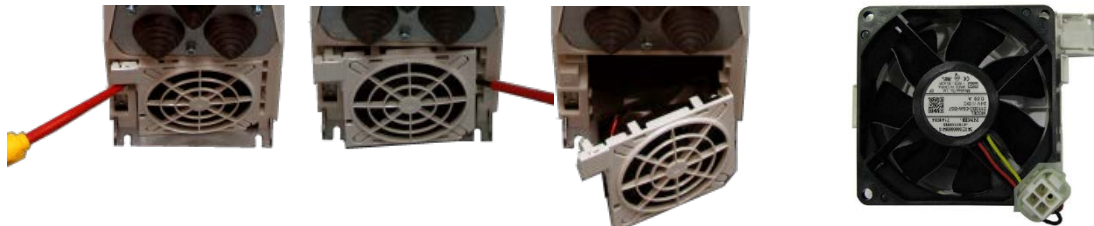
2.2.5 Old Frame R1, Main cooling fan

Types:


- ACX580-01-07A2-4
- ACX580-01-09A4-4
- ACX580-01-12A6-4

The main cooling fan is located at the bottom of the drive. Replace the fan as follows:

- a. Release two locking clamps, use a flathead screwdriver to assist
- b. Remove the fan



- c. Clean the cooling air duct and the heat sink with compressed air. See separate instructions in section 2.1.1
- d. Check that the fans blowing direction is inside the unit and install the new fan in reverse order to above. Ensure the fan operation when the drive is powered up

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 12 (41)	

2.2.6 Old Frame R1 IP55, Internal cooling fan

Types:

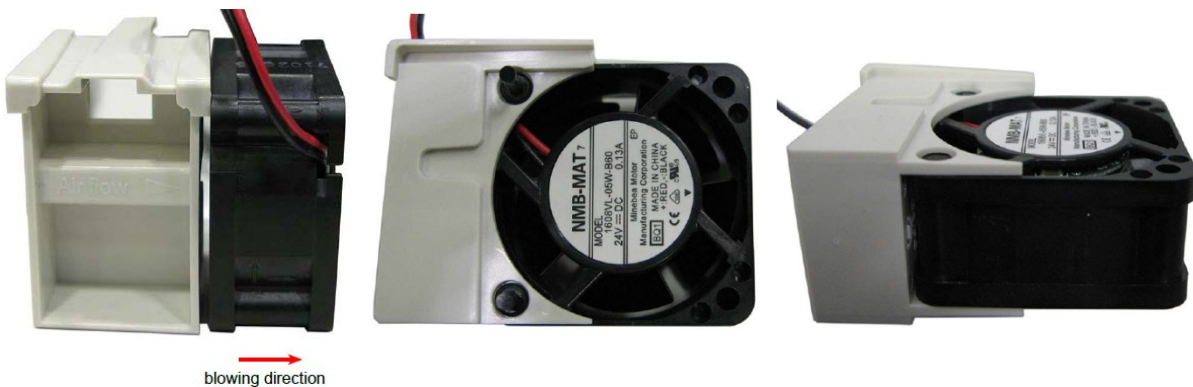
- ACX580-01-07A2-4
- ACX580-01-09A4-4
- ACX580-01-12A6-4

1. Remove front cover

- a. Remove control panel
- b. Open mounting **screw** with a screwdriver
- c. Push the front cover slightly upwards and lift it off


1. Replace internal fan


- a. Remove internal fan sledge from plastic housing
- b. Assembly new internal fan+sledge combination
 - i. Place internal fan to sledge, ensure correct blowing direction
 - ii. Place FR-1 rivets through the holes and push them to bottom



- c. Place internal fan sledge to plastic housing

2. Install components in reverse order

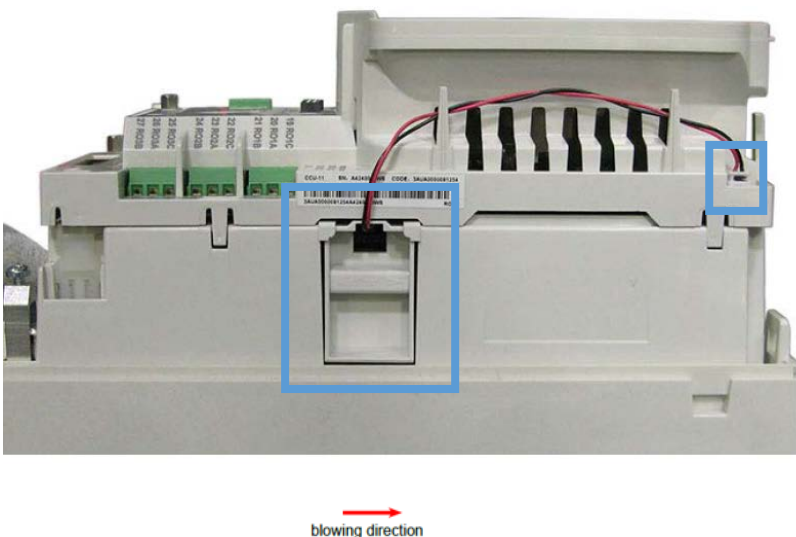

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 13 (41)	

2.2.7 New Frame R2, Main cooling fan

Types:


- ACX580-01-024A-2
- ACX580-01-025A-2
- ACX580-01-031A-2
- ACX580-01-032A-2
- ACX580-01-014A-4
- ACX580-01-018A-4
- ACX580-01-023A-4
- ACX580-01-03A9-6
- ACX580-01-06A1-6
- ACX580-01-09A0-6
- ACX580-01-011A-6
- ACX580-01-017A-6

The main cooling fan is located on the top of the drive.



Replace the fan as follows:

© Copyright 2018 ABB Oy. All rights reserved. Specifications subject to change without notice.

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 14 (41)	


1. Release the two locking clamps, use a flathead screwdriver to assist.



2. Remove the fan.



3. Clean the cooling air duct and the heat sink with compressed air. See separated instructions in section 2.1.1.
4. Check that the fans blowing direction is outside the unit and install the new fan in reverse order to above. Ensure the fan operation when the drive is powered up.

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 15 (41)	

2.2.8 New Frame R2 IP55, Internal cooling fan

Types:

- ACX580-01-024A-2
- ACX580-01-025A-2
- ACX580-01-031A-2
- ACX580-01-032A-2
- ACX580-01-014A-4
- ACX580-01-018A-4
- ACX580-01-023A-4
- ACX580-01-026A-4
- ACX580-01-02A7-6
- ACX580-01-03A9-6
- ACX580-01-06A1-6
- ACX580-01-09A0-6
- ACX580-01-011A-6
- ACX580-01-017A-6

Remove the front cover. You will find the internal cooling fan on the right side of the drive.

1. Remove the transparent plastic cover in front of the fan with a screwdriver.



2. Unlock the wires from the right and take slowly the fan out by pulling the wires.


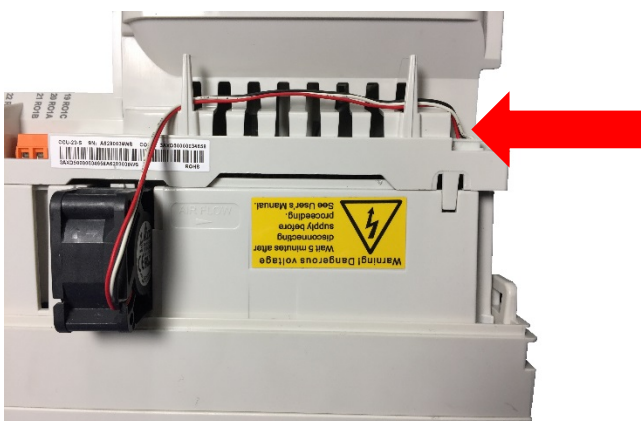
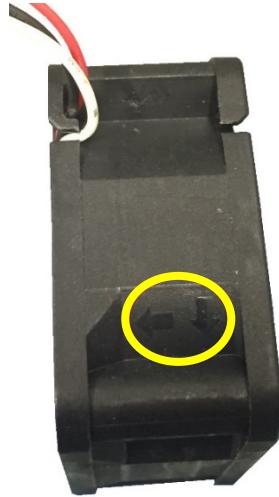



ABB ABB Oy, Drives Service	On-Site Service Instructions		Document nbr 3AXD10000303478
	ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 16 (41)

3. Assembly the new internal fan and check that the blowing direction is to downwards.
Remember to reinstall the transparent plastic cover and the wires.

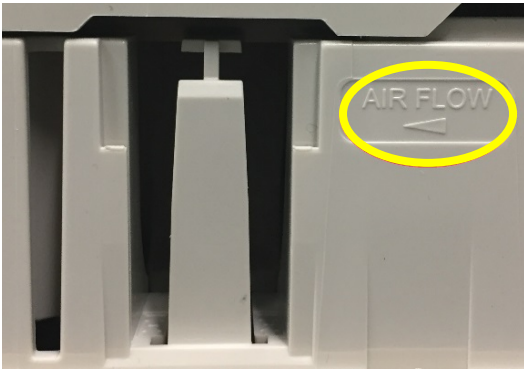

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 17 (41)	

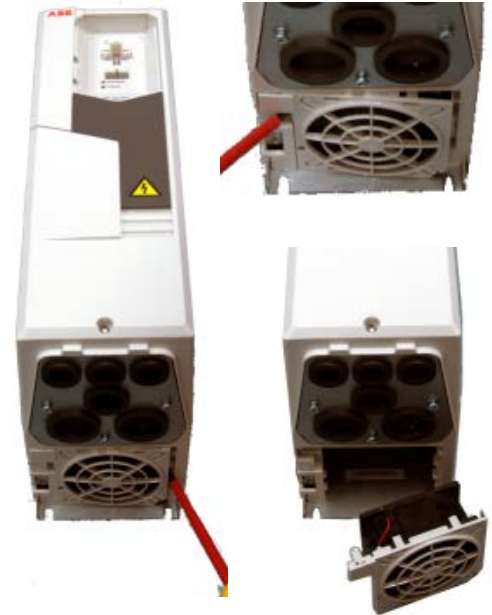
2.2.9 Old Frame R2, Main cooling fan

Types:

- ACX580-01-017A-4
- ACX580-01-025A-4


The main cooling fan is located at the bottom of the drive.
Replace the fan as follows:

- a. Release two locking clamps, use a flathead screwdriver to assist
- b. Remove the fan
- c. Clean the cooling air duct and the heat sink with compressed air. See separate instructions in section 2.1.1



- d. Check that the fans blowing direction is inside the unit and install the new fan in reverse order to above. Ensure the fan operation when the drive is powered up



 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 18 (41)	

2.2.10 Old Frame R2 IP55, Internal cooling fan

Types:

- ACX580-01-017A-4
- ACX580-01-025A-4

1. Remove front cover

- a. Remove control panel
- b. Open mounting **screw** with a screwdriver
- c. Push the front cover slightly upwards and lift it off

2. Remove control unit

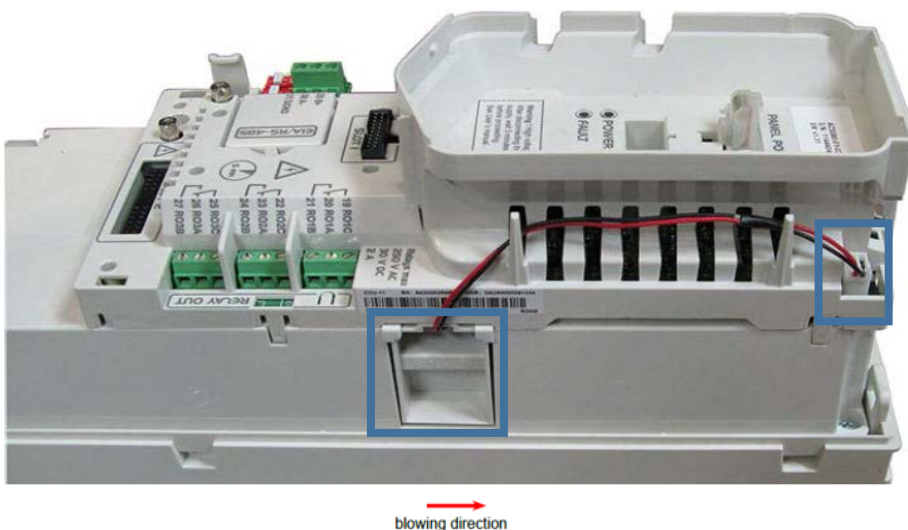
- a. Remove mounting screws with a screwdriver
- b. Release mounting clamps and lift CCU-11/CCU-23 and the rigid connector off

3. Replace internal fan

- a. Remove internal fan sledge and cable from plastic housing
- b. Assembly new internal fan+sledge combination
 - i. Place internal fan to sledge, ensure correct blowing direction
 - ii. Place FR-1 rivets through the holes and push them to bottom




- c. Place internal fan sledge to plastic housing



4. Install components in reverse order

© Copyright 2018 ABB Oy. All rights reserved. Specifications subject to change without notice.

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 19 (41)	

2.2.11 New Frame R3, Main cooling fan

Types:


- ACX580-01-046A-2
- ACX580-01-047A-2
- ACX580-01-059A-2
- ACX580-01-060A-2
- ACX580-01-027A-4
- ACX580-01-033A-4
- ACX580-01-034A-4
- ACX580-01-039A-4
- ACX580-01-044A-4
- ACX580-01-046A-4
- ACX580-01-022A-6
- ACX580-01-027A-6
- ACX580-01-032A-6


The main cooling fan is located on the top of the drive.




Replace the fan as follows:

1. Release the locking clamp, use a flathead screwdriver to assist.

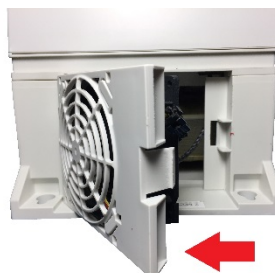


 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 20 (41)	

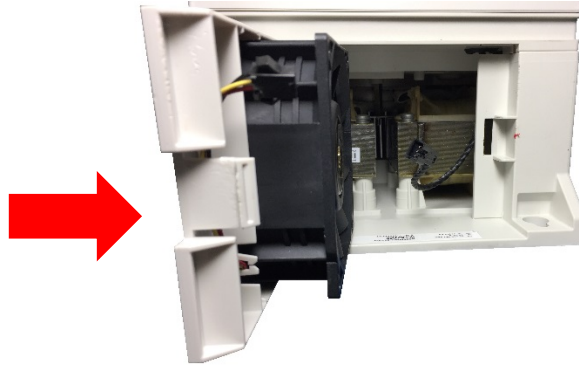
- Remove the fan by opening the unit and pushing rightwards at the base.



- Clean the cooling air duct and the heat sink with compressed air. See separate instructions in section 2.1.1
- Check that the fans blowing direction is outside the unit and install the new fan unit simply by pushing it to its place.

Ensure the fan operation when the drive is powered up

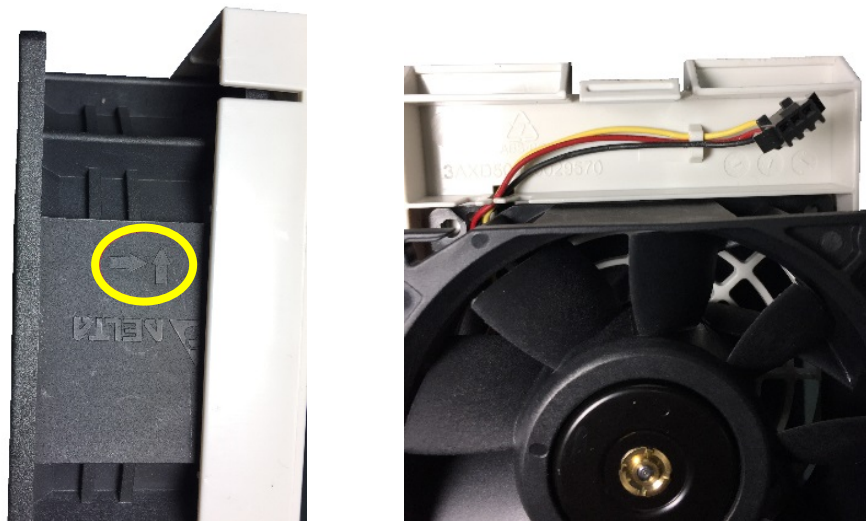

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 21 (41)	

2.2.12 New Frame R3 IP55, Internal cooling fan

Types:

- ACX580-01-046A-2
- ACX580-01-047A-2
- ACX580-01-059A-2
- ACX580-01-060A-2
- ACX580-01-027A-4
- ACX580-01-033A-4
- ACX580-01-034A-4
- ACX580-01-039A-4
- ACX580-01-044A-4
- ACX580-01-046A-4
- ACX580-01-022A-6
- ACX580-01-027A-6
- ACX580-01-032A-6

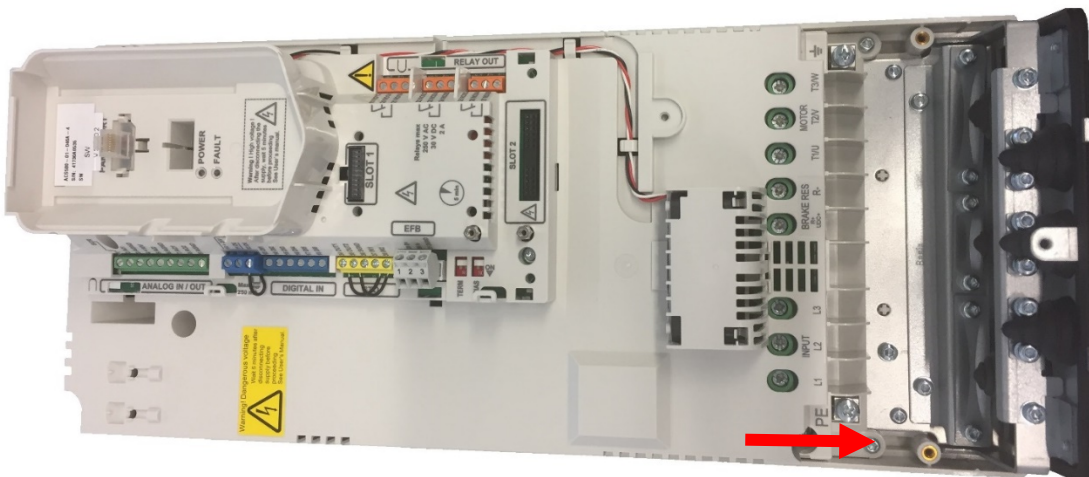
1. Remove front cover

- a. Remove control panel
- b. Open mounting screws with a screwdriver
- c. Push the front cover slightly upwards and lift it off




2. Replace the internal fan

- a. Remove internal fan plastic housing
- b. Remove fan connector from CCU-23
- c. Replace internal fan, see that the blowing direction is downwards the unit



3. Install components in reverse order

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 22 (41)	

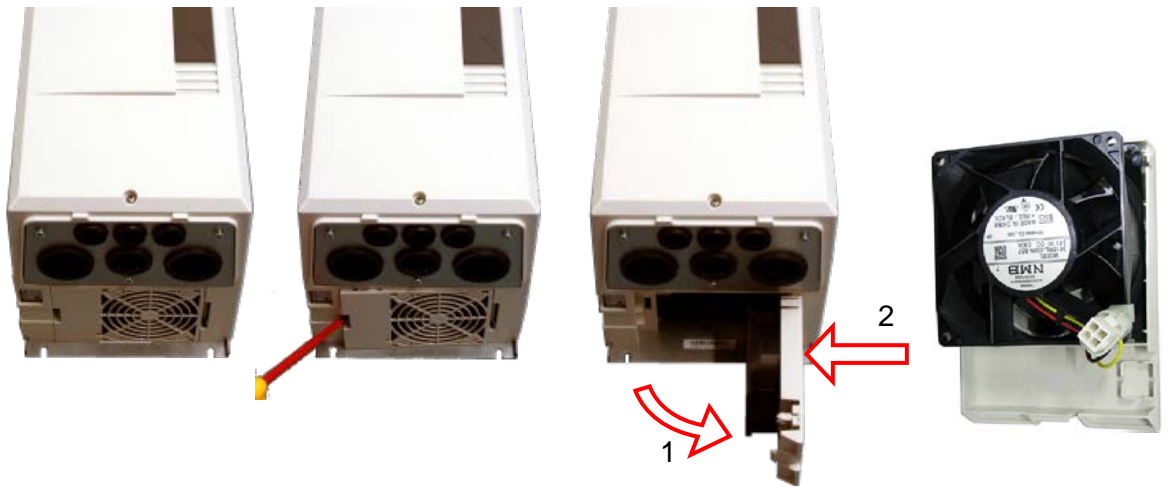
2.2.13 Old Frame R3, Main cooling fan

Types:

- ACX580-01-032A-4
- ACX580-01-038A-4
- ACX580-01-045A-4


The main cooling fan is located at the bottom of the drive. Replace the fan as follows:

- a. Release the locking clamp, use a flathead screwdriver to assist
- b. Remove the fan by opening the unit (1.) and pushing leftwards at the base (2.)



- c. Clean the cooling air duct and the heat sink with compressed air. See separate instructions in section 2.1.1
- d. Check that the fans blowing direction is inside the unit and install the new fan unit simply by pushing it to its place.

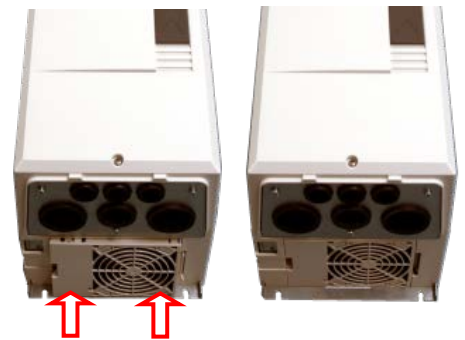Ensure the fan operation when the drive is powered up



2.2.14 Old Frame R3 IP55, Internal cooling fan

Types:

- ACX580-01-032A-4
- ACX580-01-038A-4
- ACX580-01-045A-4

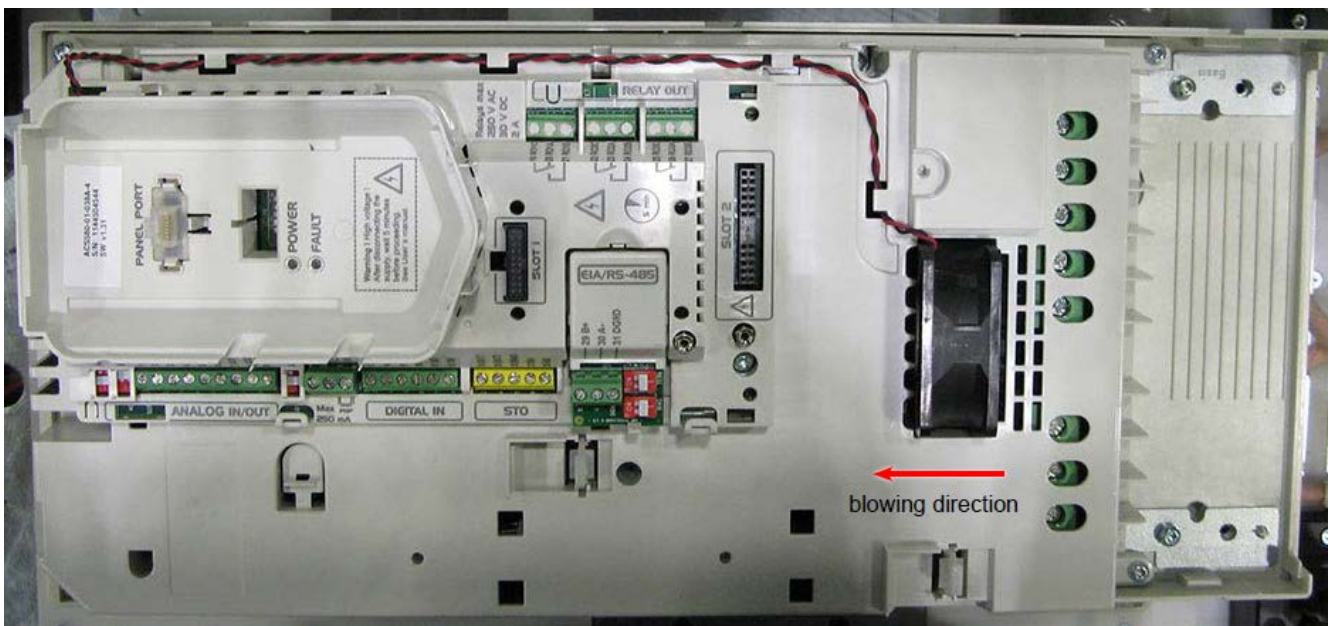
1. Remove front cover

- Remove control panel
- Open mounting **screws** with a screwdriver
- Push the front cover slightly upwards and lift it off




2. Replace internal fan

- Remove internal fan plastic housing
- Remove fan connector from CCU-11/CCU-23
- Replace internal fan, see that the blowing direction is upwards the unit



3. Install components in reverse order

 ABB Oy, Drives Service		On-Site Service Instructions		Document nbr 3AXD10000303478
		ACx580-01 R0-R5		Related to material
Department ESP300	Date 13.08.2018	Revision F	Page 24 (41)	

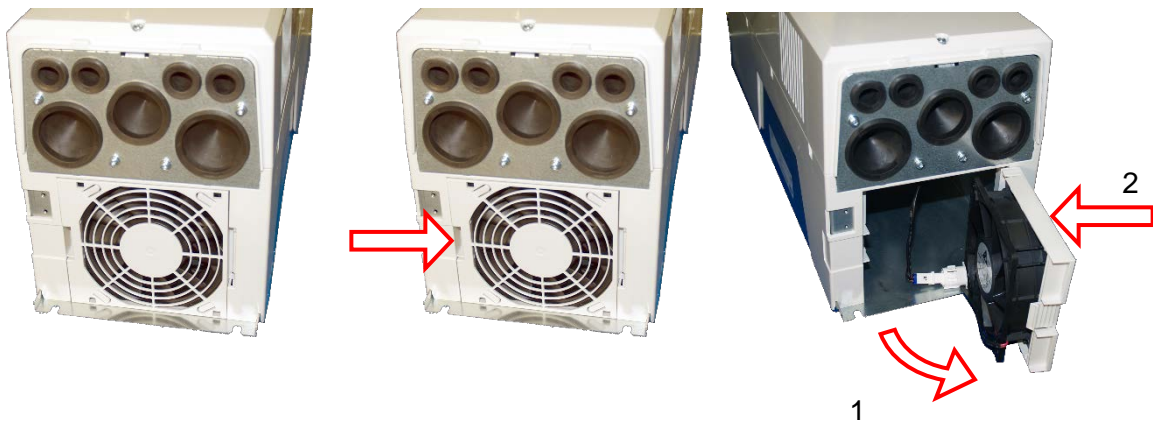
2.2.15 Frame R4, Main cooling fan

Types:

- ACX580-01-062A-4
- ACX580-01-073A-4
- [ACX580-01-075A-2](#)
- [ACX580-01-076A-2](#)
- [ACX580-01-052A-4](#)
- [ACX580-01-065A-4](#)
- [ACX580-01-077A-4](#)

The main cooling fan is located at the bottom of the drive. Replace the fan as follows:

- a. Release the locking clamp, use a flathead screwdriver to assist
- b. Remove the fan by opening the unit (1.) and pushing leftwards at the base (2.)



- c. Clean the cooling air duct and the heat sink with compressed air. See separate instructions in section 2.1.1
- d. Check that the fans blowing direction is inside the unit and install the new fan unit simply by pushing it to its place.

Ensure the fan operation when the drive is powered up

