ABB		On-Site Service Instructions	3AXD10000303478	
ABB Oy, Drives Service		ACx580-01 R6-R9		Related to material
Department	Date		Revision	Page
ESP400	30.05.2016		В	13 (126)

3.3.4 Frame R6, ZINP replacement

1. Remove covers and cable gland box

- a. Remove the control panel
- b. Open two mounting screws.
- c. First lift off top cover and then release four clips to remove bottom cover.
 d. Remove the cable gland box by opening the mounting screws. (3pcs)M6x12










2. Remove CCU

a. Remove CCU (see instructions in section 3.3.3 Control unit replacement (CCU), page 12).

3. Remove middle frame (skeleton)


- a. Remove grounding screws.(5pcs) M4x8
- b. Remove skeleton mounting screws. (10pcs)M5x12



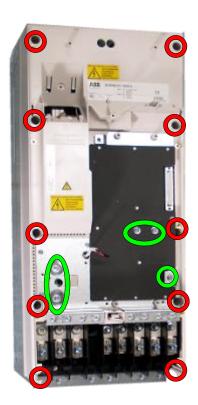

4. Remove ZINP board

- a. Unplug ZINP wiring.
- b. Remove ZINP board mounting screws (5pcs)M4X8 and nut M4
- c. Remove the board.

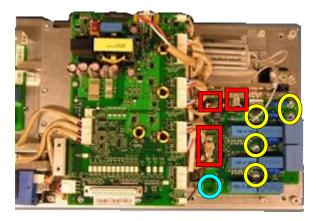

5. Install components in reverse order

ABB		On-Site Service Instructions	3AXD10000303478	
ABB Oy, Drives Service		ACx580-01 R6-R9		Related to material
Department	Date		Revision	Page
ESP400	30.05.2016		В	15 (126)

3.3.5 Frame R7, ZINP replacement

1. Remove covers and cable gland box

- a. Remove the control panel
- b. Open two mounting screws.
- c. First lift off top cover and then release four clips to remove bottom cover.
- d. Remove the cable gland box by opening the mounting screws. (3pcs)M6x12







2. Remove CCU


a. Remove CCU (see instructions in section 3.3.3 Control unit replacement (CCU), page 12).

ABB		On-Site Service Instructions	3AXD10000303478	
ABB Oy, Drives Service		ACx580-01 R6-R9		Related to material
Department	Date		Revision	Page
ESP400	30.05.2016		В	16 (126)

3. Remove middle frame (skeleton)

- a. Remove grounding screws. (5pcs) M4x8
- b. Remove skeleton mounting screws. (10pcs)M5x12




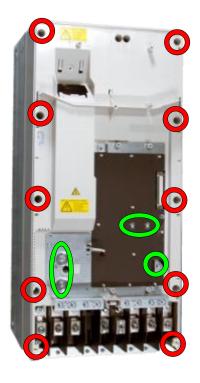



4. Remove ZINP board

- a. Unplug ZINP wiring
- b. Remove ZINP board mounting screws (3pcs) M4X12 and (2pcs)M4X12 (if used)
- c. Release ZINP board plastic holders and replace the board

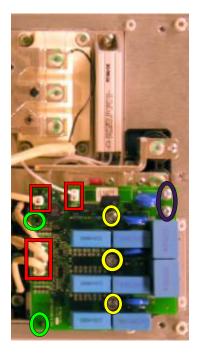

5. Install components in reverse order

ABB		On-Site Service Instructions	3AXD1	Document nbr 0000303478
ABB Oy, Drives Service		ACx580-01 R6-R9		Related to material
Department	Date		Revision	Page
ESP400	30.05.2016		В	17 (126)

3.3.6 Frame R8, ZINP replacement

1. Remove covers and cable gland box

- a. Remove the control panel
- b. Open two mounting screws.
- c. First lift off top cover and then release four clips to remove bottom cover.
- d. Remove the cable gland box by opening the mounting screws. (3pcs)M6x12







2. Remove CCU

a. Remove CCU (see instructions in section 3.3.3 Control unit replacement (CCU), page 12).



ABB		On-Site Service Instructions	3AXD10000303478	
ABB Oy, Drives Service		ACx580-01 R6-R9		Related to material
Department	Date		Revision	Page
ESP400	30.05.2016		В	18 (126)

3. Remove middle frame (skeleton)

- a. Isolating plexiglas fixing screws (2pcs) K40x16 PT
- b. Grounding screws (2-4pcs) M4x12
- c. Skeleton fixing screws (8pcs) M5x12 and (2pcs) M5x20





4. Replace ZINP board

- a. Unplug ZINP wiring
- b. Remove ZINP board mounting screws, (2pcs)M4X12 and (3pcs)
- c. Release ZINP board plastic holders and replace the board



5. Install components in reverse order

ABB		On-Site Service Instructions	3AXD10000303478	
ABB Oy, Drives Service		ACx580-01 R6-R9		Related to material
Department	Date		Revision	Page
ESP400	30.05.2016		В	19 (126)

3.3.7 Frame R9, ZINP replacement

1. Remove covers and cable gland box

- a. Remove the control panel
- b. Open two mounting screws.
- c. First lift off top cover and then release four clips to remove bottom cover.
- d. Remove the cable gland box by opening the mounting screws. (3pcs)M6x12







2. Remove CCU

a. Remove CCU (see instructions in section 3.3.3 Control unit replacement (CCU), page 12).



ABB		On-Site Service Instructions	3AXD10000303478	
ABB Oy, Drives Service		ACx580-01 R6-R9		Related to material
Department	Date		Revision	Page
ESP400	30.05.2016		В	20 (126)

3. Remove middle frame (skeleton)

- a. Isolating plexiglas fixing screws (2pcs) M4x16 PT
- b. Grounding screws (2-4pcs) M4x12
- c. Skeleton fixing screws (9pcs) M5x12



4. Replace ZINP board

- a. Unplug ZINP wiring.
- b. Remove ZINP board mounting screws. (2pcs)M4X12 and (3pcs) M4X12
- c. Release ZINP board plastic holders and replace the board.



5. Install components in reverse order